DATA SHEET

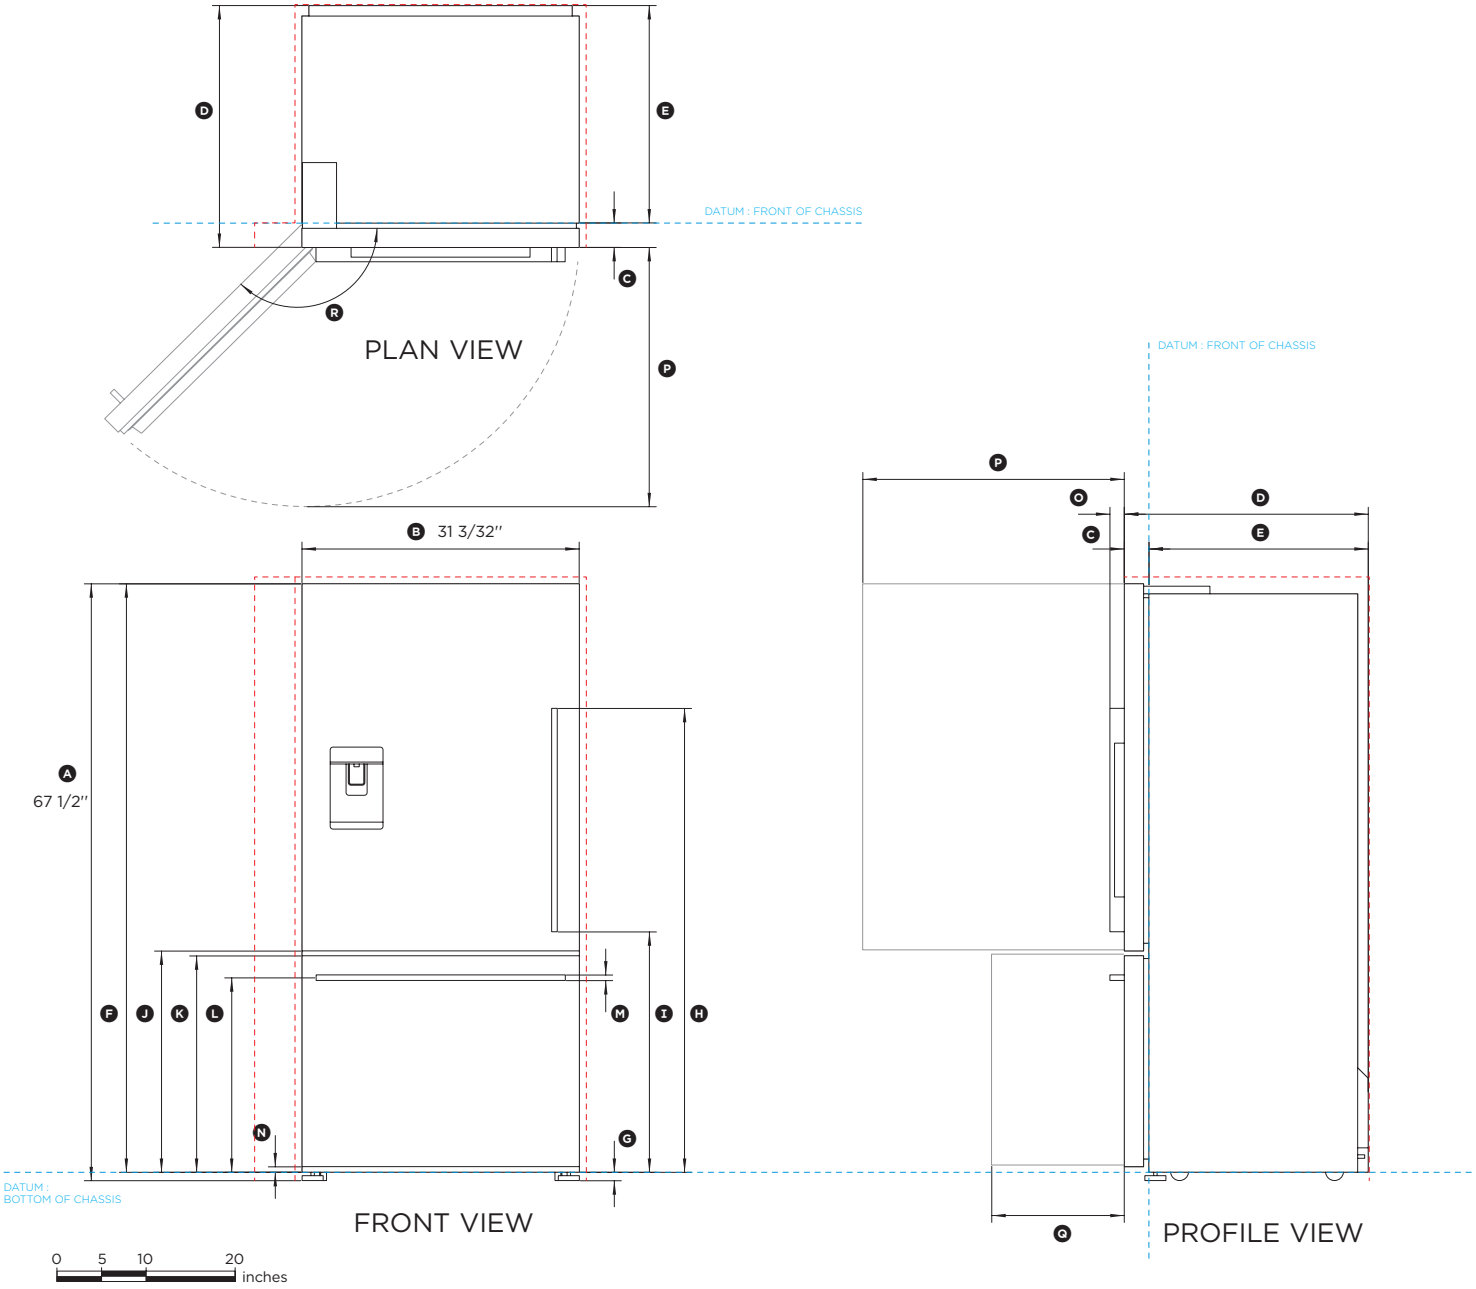

790MM ACTIVESMART™ FRIDGE

Model no:
RF170WDLUX4, RF170WDLUX5
(refer page 2 for metric measurements)

Product Dimensions	**in**
(A) Overall height* of fridge	67 1/2"
(B) Overall width of fridge	31 3/32"
(C) Depth of fridge door and gasket (excludes handle)	2 3/4"
(D) Depth of fridge door and chassis (excludes handle)	27 3/8"
(E) Depth of fridge chassis (does not include fridge door)	24 5/8"
(F) Height from bottom datum to top of fridge door	66 9/16"
(G) Height of feet (adjustable)	15/16"
(H) Height from bottom datum to top of top handle	52 3/8"
(I) Height from bottom datum to bottom of top handle	27 1/8"
(J) Height from bottom datum to bottom of top door	25 5/32"
(K) Height from bottom datum to top of bottom door	24 21/32"
(L) Height from bottom datum to centerline of bottom handle	22 3/16"
(M) Thickness of handles	5/8"
(N) Height from bottom datum to bottom of bottom door	13/16"
(O) Depth of handle (measured from front of door)	1 5/8"
(P) Depth of door (open at 90°) (measured from front of door)	29 5/16"
(Q) Depth of drawer (open) (measured from front of drawer) excluding handle	14 3/4"
(R) Rotation of door (open)	138°

* Includes mounted feet

Minimum Clearances	**in**
Minimum height of cavity	68 5/16"
Minimum side clearance installed flush with chassis	25/32"
Side clearance (hinge side) – installed flush with door - full rotation	5 5/16"
Rear clearance (including evaporator tray)	1 3/16"

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **06.10.2015**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

Fisher&Paykel

790MM ACTIVESMART™ FRIDGE

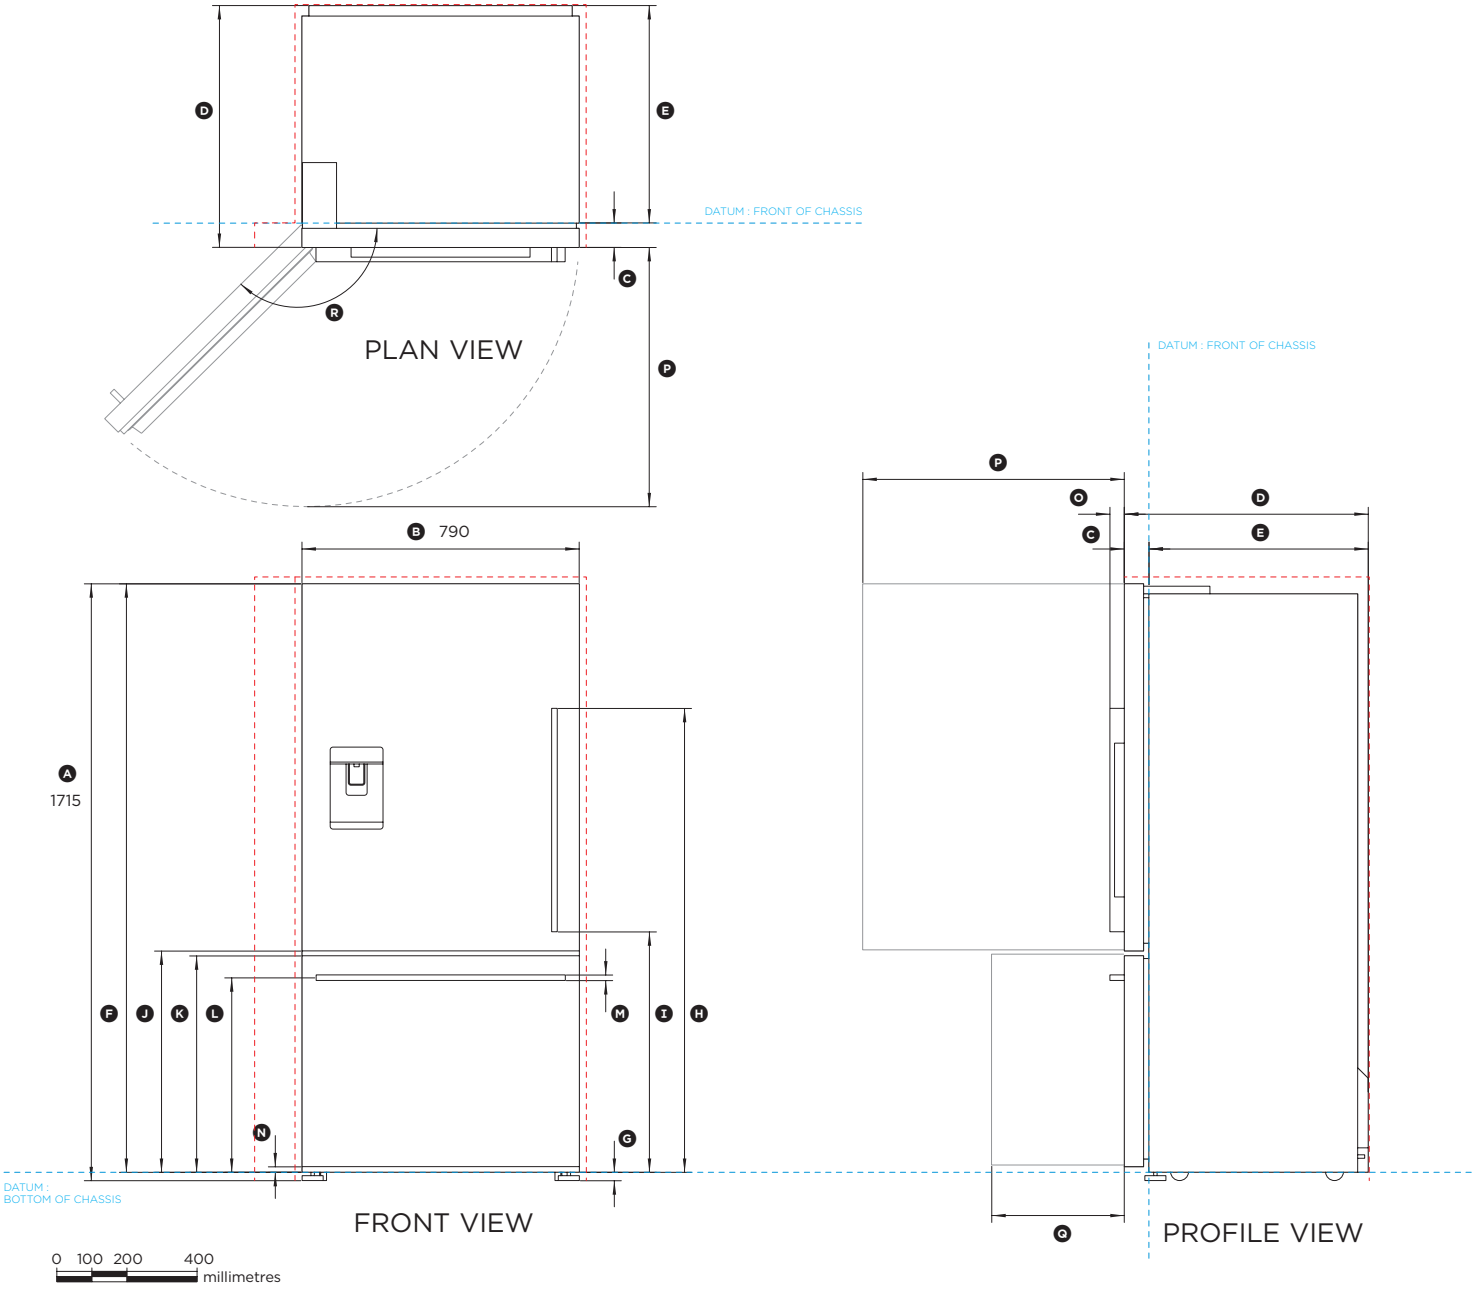

Model no:

RF170WDLUX4, RF170WDLUX5

(refer page 1 for imperial measurements)

Product Dimensions	**mm**
Ⓐ Overall height* of fridge	1715
Ⓑ Overall width of fridge	790
Ⓒ Depth of fridge door and gasket (excludes handle)	70
Ⓓ Depth of fridge door and chassis (excludes handle)	695
Ⓔ Depth of fridge chassis (does not include fridge door)	625
Ⓕ Height from bottom datum to top of fridge door	1691
Ⓖ Height of feet (adjustable)	24
Ⓗ Height from bottom datum to top of top handle	1331
Ⓘ Height from bottom datum to bottom of top handle	689
Ⓙ Height from bottom datum to bottom of top door	639
Ⓚ Height from bottom datum to top of bottom door	627
Ⓛ Height from bottom datum to centreline of bottom handle	564
Ⓜ Thickness of handles	16
Ⓝ Height from bottom datum to bottom of bottom door	21
Ⓞ Depth of handle (measured from front of door)	41
Ⓟ Depth of door (open at 90°) (measured from front of door)	745
Ⓠ Depth of drawer (open) (measured from front of drawer) excluding handle	375
Ⓡ Rotation of door (open)	138°

* Includes mounted feet

Minimum Clearances	**mm**
Minimum height of cavity	1735
Minimum side clearance installed flush with chassis	20
Side clearance (hinge side) – installed flush with door - full rotation	135
Rear clearance (including evaporator tray)	30

INDICATES PRODUCT DATUM ----------

INDICATES CABINETRY CLEARANCES ----------

DATE: **06.10.2015**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

Fisher&Paykel